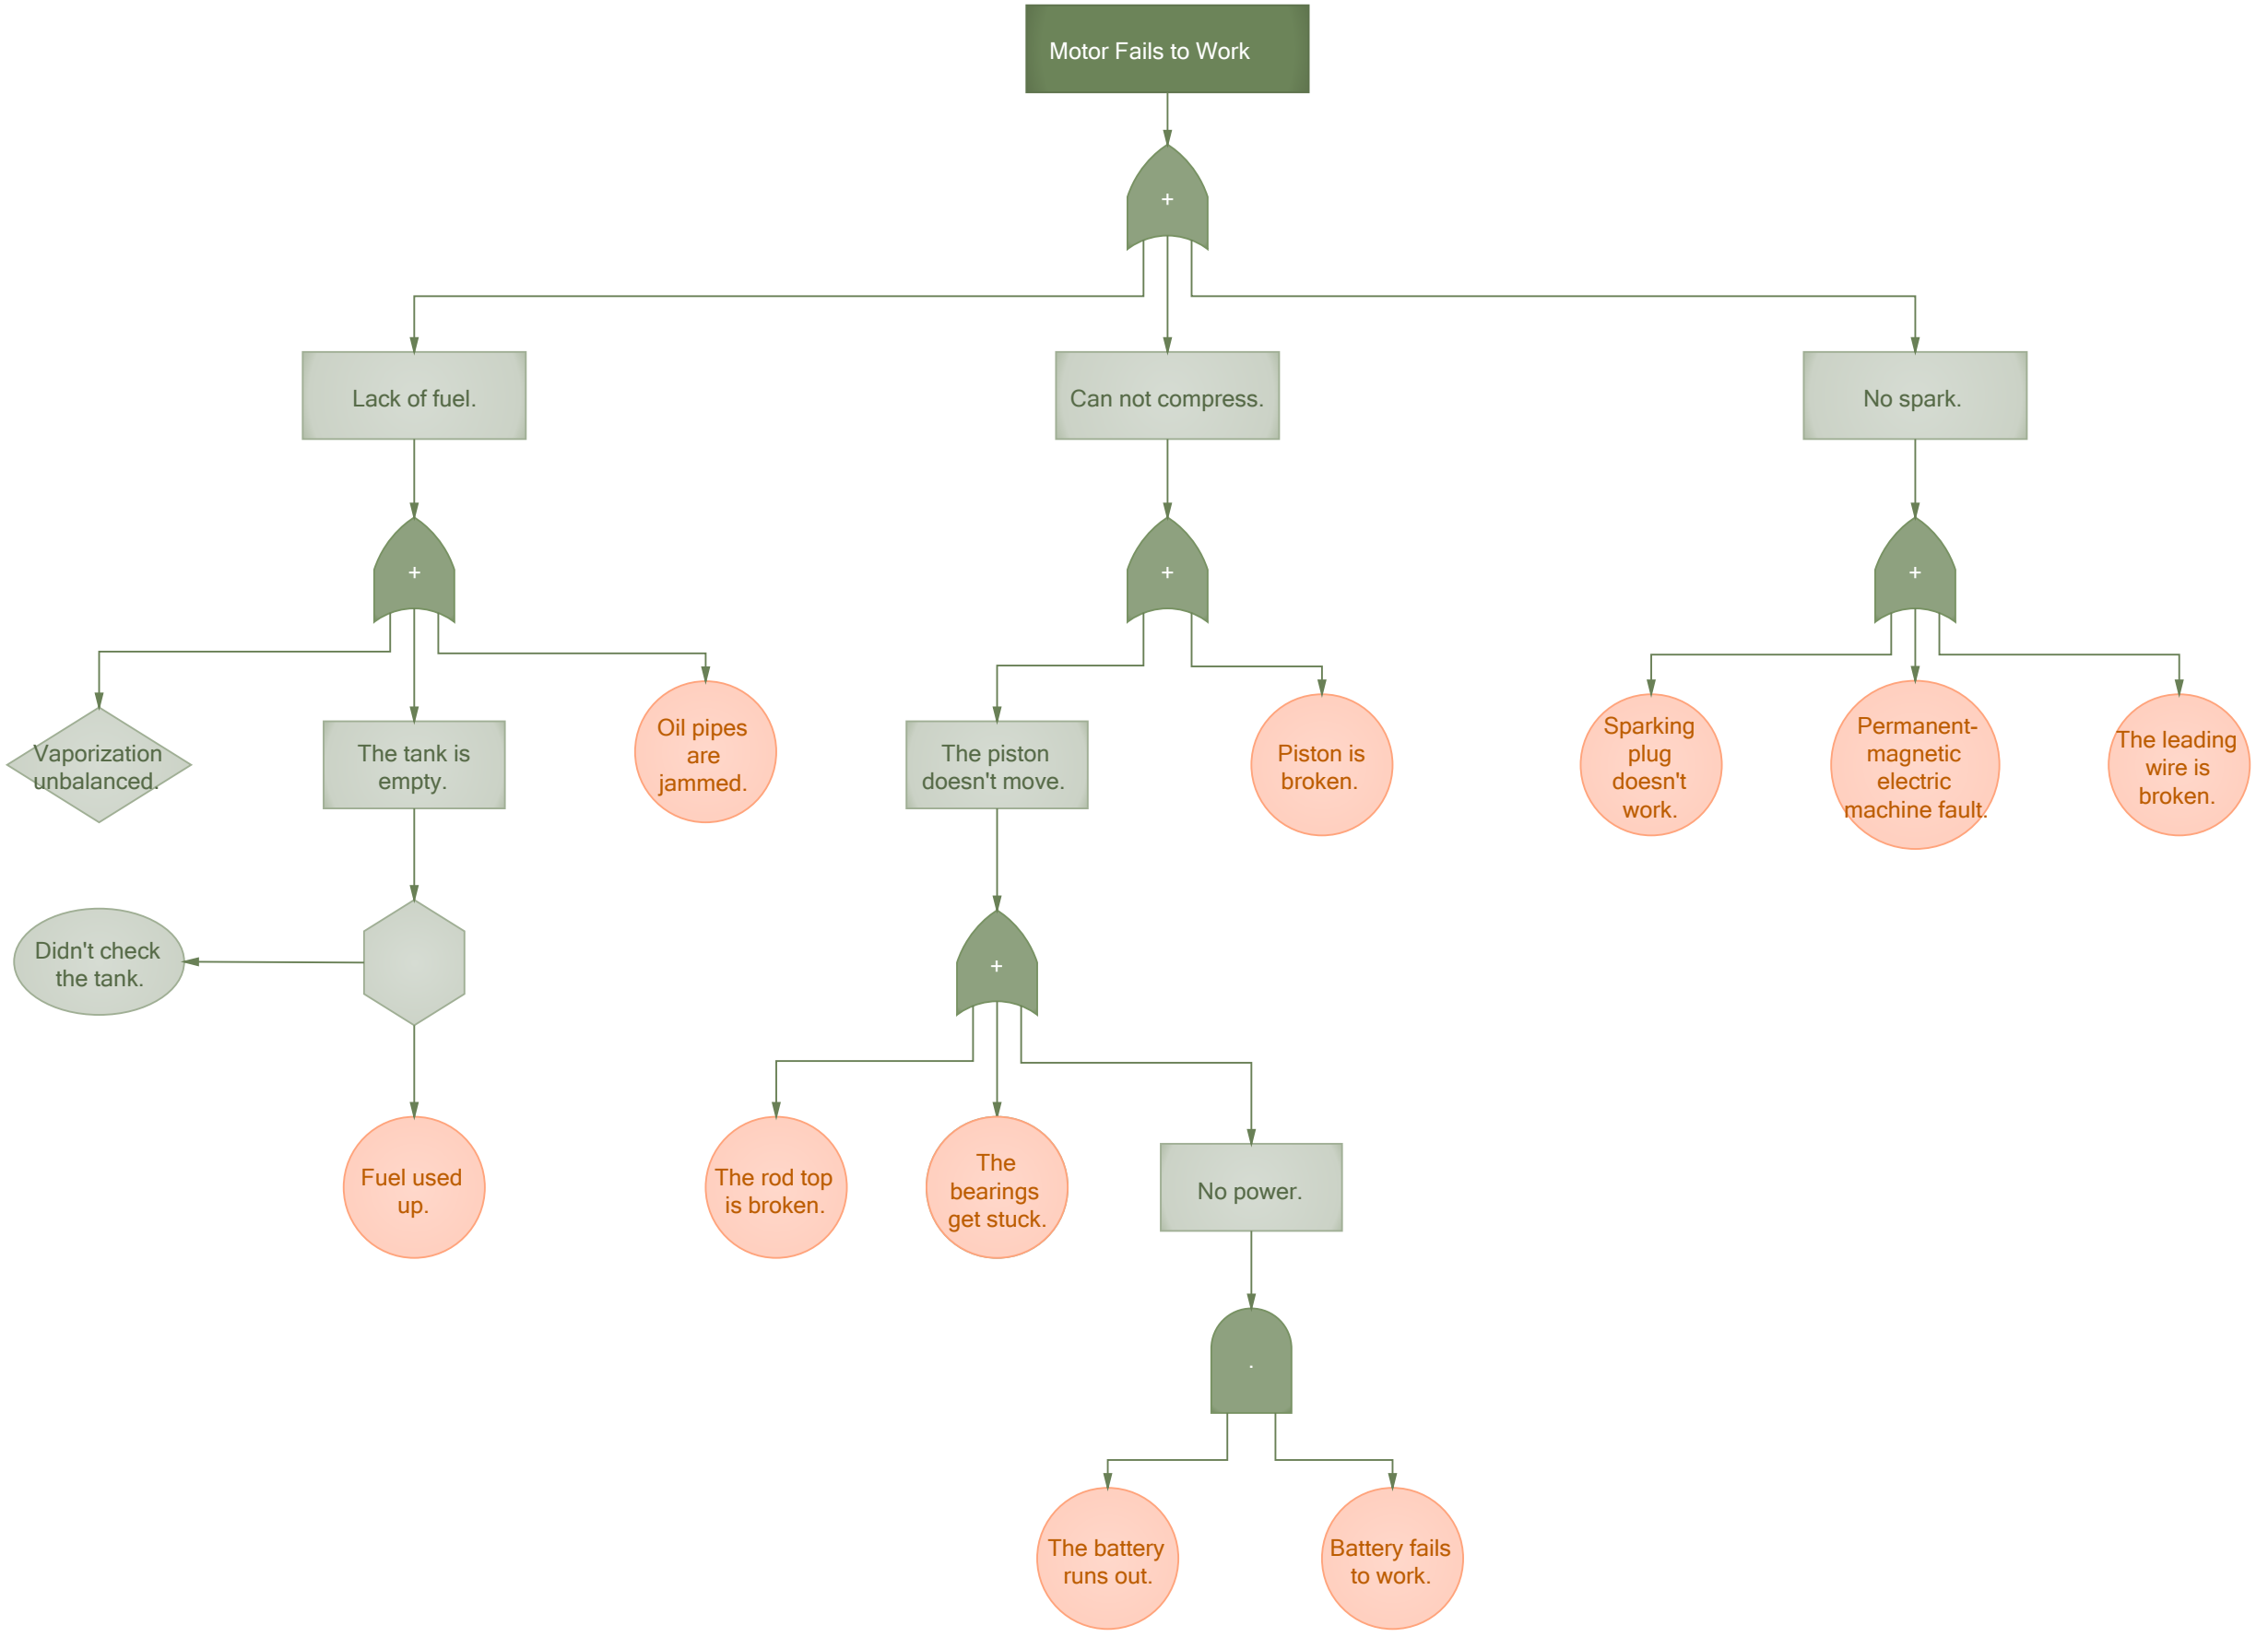
Motor Fails to Work
+
Lack of fuel.
Can not compress.
No spark.
+
Vaporization unbalanced.
The tank is empty.
Oil pipes are jammed.
Didn't check the tank.
Fuel used up.
+
The piston doesn't move.
Piston is broken.
+
The rod top is broken.
The bearings get stuck.
No power.
.
The battery runs out.
Battery fails to work.
+
Sparking plug doesn't work.
Permanent-magnetic electric machine fault.
The leading wire is broken.